

Introduction to cleaning and maintenance of Visual Cooking ovens

HOUNÖ recommends daily cleaning of the Visual Cooking oven for hygienic reasons and to avoid interruptions of operation.

Daily cleaning of oven chamber

C, K and B ovens: use the semi-automatic cleaning programme. Use the fully automatic cleaning programme CombiWash if the oven is equipped with this (optional extra).


CPE, KPE and BPE ovens: use the fully automatic cleaning programme CombiWash. Choose from level 1 to 4 depending on how dirty the oven is.

The oven chamber has to be below 80°C before using the cleaning programme.

Cleaning behind filter housing

For thorough cleaning of the oven chamber, move the filter housing so that it becomes possible to clean round the fan and heating elements.


Loosen the 2 screws (A) and (B) on the filter housing, turn the filter housing and clean behind it. The filter housing can be dismantled entirely by lifting it upwards till it is clear of the pin at the bottom and then tipping it.

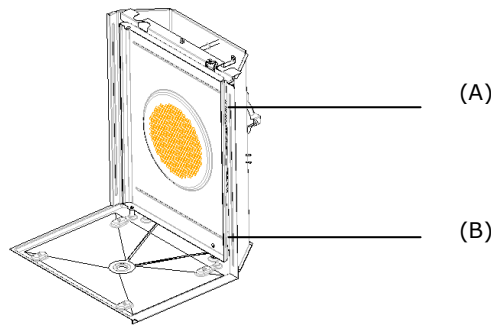

Cleaning of jet heads

The jet head should be dismantled and cleaned regularly to avoid clogging. The easiest way to clean the jet head is to let it soak in scale remover. If the oven is equipped with the fully automatic cleaning system, CombiWash, there will be two jet heads. The other jet head will be located to the right of or above the first one. This jet head should also be cleaned regularly.

Please note the position of the jet heads:

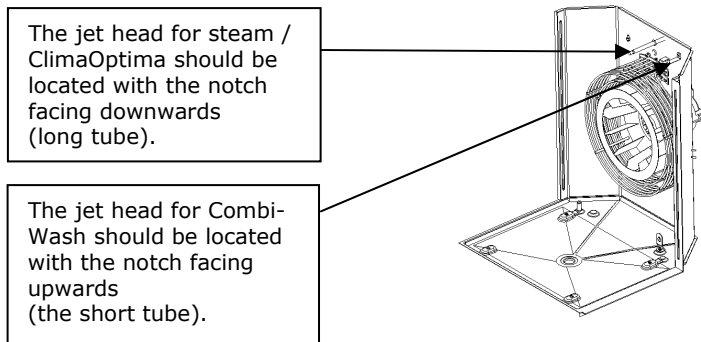

External cleaning


The design of the Visual Cooking ovens allows quick and easy cleaning. The oven chamber is made of all-welded stainless steel, which makes it splash proof. The door sealing is easy to remove, which ensures quick and efficient cleaning under and around it. Clean the interior door glass by loosening the glass and wiping it with a moist cloth.

Wash the oven cabinet on the outside with soapy water and dry with a soft and damp cloth. After drying, apply HOUNÖ's steel oil to give an extra shine. Please note that this should only be used externally.

The exterior of the oven must never be flushed with a water hose or high-pressure cleaner as this may damage the electronic components.

Filter

Under the front panel is a filter that has to be cleaned on a weekly basis – either manually or automatically. Remember to fit the filter again after cleaning to prevent dirt, soil, etc. from entering the oven.

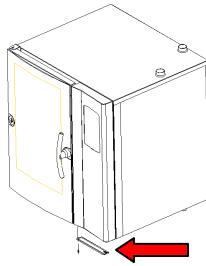

For more information about cleaning and maintenance, please refer to the HOUNÖ user manual. You can also download the HOUNÖ user DVD at www.houno.com.